


Test Platform Cable User Manual

1. Wiring Connection

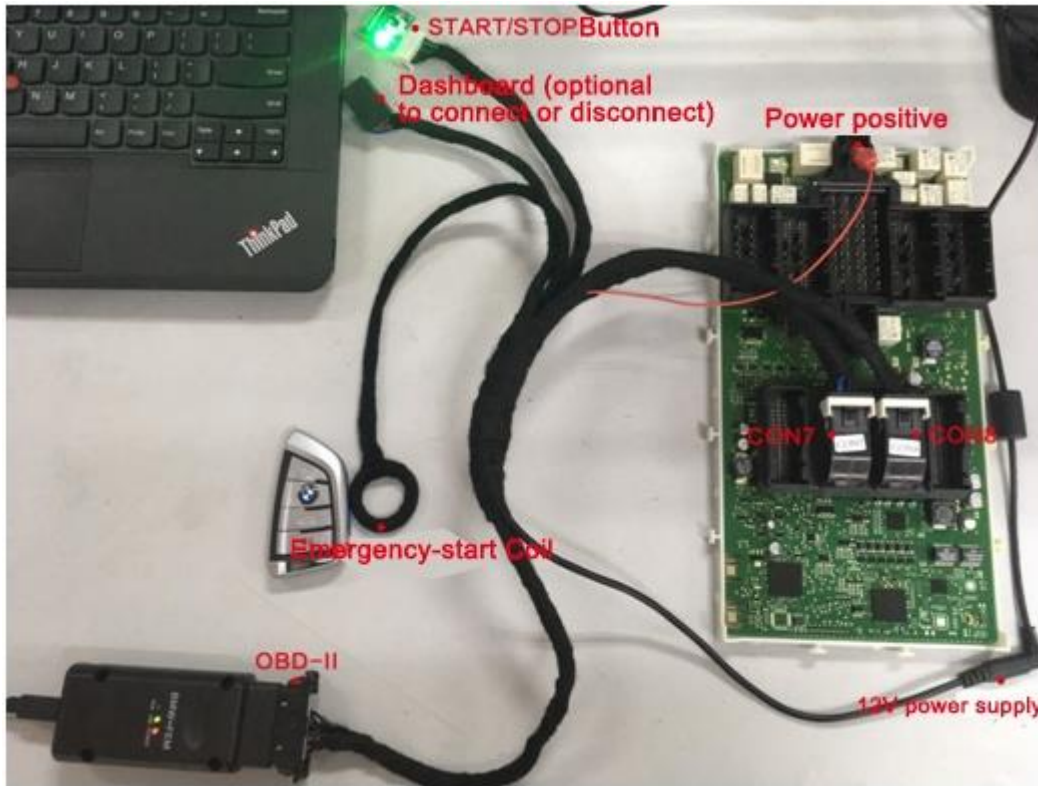

Pic. 1 Cables & adapters wiring connection diagram


2. Key Position



Pic. 2 Emergency-Start coil position

Put the key marked with red (see above pic.2) on the coil.

3. START/STOP button operation

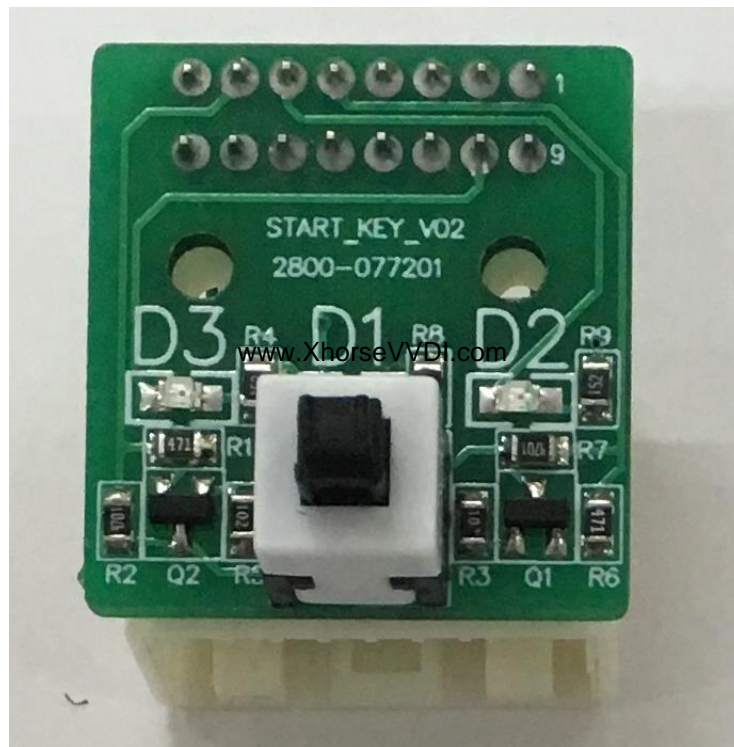

D1: START/STOP button's indicator- light on when the power supply is connected

D2: Automatic stop and start function (MSA) indicator- default status: light off

D3: Engine fire shutoff switch's indicator (to replace the dashboard and display the status of the engine fire shutoff switch)- light on when the switch is turned on and light off when the engine is turned off

How to turn on the engine fire shutoff switch:

Put the working key on the coil;

Press the button;

Engine fire shutoff switch indicator (D3) lights on;

(If the indicator fails to light on, wait for 3-5 seconds and press it again)

How to turn off the engine fire shutoff switch:

Press it continuously for 3 times;

Engine fire shutoff switch indicator (D3) lights off- engine fire shutoff switch is turned off